




MANUAL GUIDE

for measuring a vehicle to determine the matching Pro-Spacer

Driverside

Passengerside

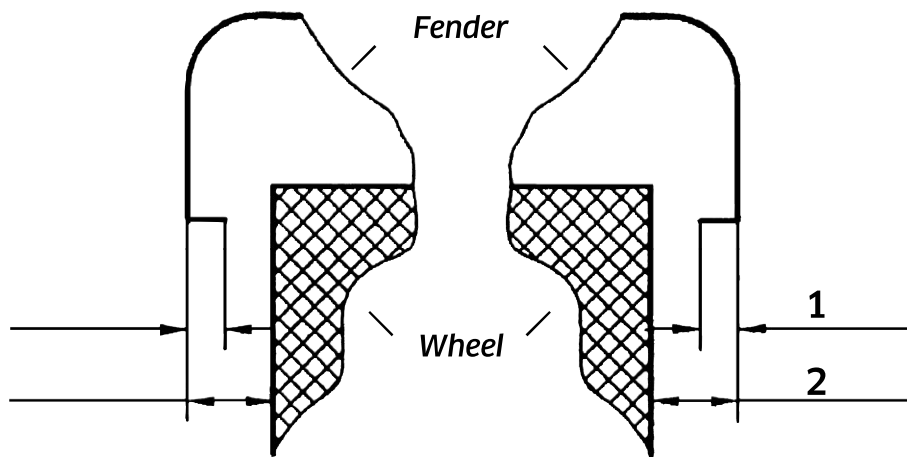

Procedure:

Measuring is very important

How to measure:

- Measure distance 1 and 2 as shown in the picture
- Subtract measurement 1 from measurement 2 (minus 3 to 5 mm safety)
- This way you will obtain an approximately measurement of which kind of spacer fits on each side

Please note:

You should always measure both - the driver and passenger side, because axle hub locations may differ slightly from side to side. In this case you choose the lower measurement! Additionally you should pay attention to parts in the fender (for example screws, inner fender linings, et cetera).

Please use the Pro-Spacer-Checklist.

 **Manual**
for measurement

